




Small Pipe Installation

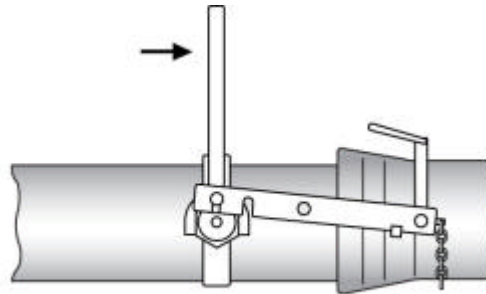

80mm—450mm Sidelink Tackle

Insert the gasket and lubricate the joint area as previously instructed. (See page 7)

Support the pipe joint clear of the bottom of the trench.

Using a pipe pulling tool, pull the spigot into the socket ensuring an even pull on each side to prevent an uneven entry.

By reversing the jointing tackle the joint can be separated. If you have installed an anchor gasket, suitable shims will be required to enable the pipe to be separated.